

Panasonic KX-TDA50/50G, KX-TDE100/200 Name Change in Display

How To Change The Name In The Display:

1. Press the button directly under PROG in the display
2. Dial *# Enter 1234 for password
3. System will ask for Sys-Pgm No? (System Program number)
4. Dial 004 and Press enter
5. Dial the appropriate extension number
6. Using the keypad spell out what you want the display to say. For a space press the button directly under the arrow in the display
7. When finished press enter